


RED LIGHT

1/16" X 1/8" TRAILING EDGE  
3/32" SQ. LEADING EDGE



LEADING EDGE IS  
BANDED ROUND AS  
SHOWN ABOVE.

MAKE 2 SIDES OF 1/16" BALSAL


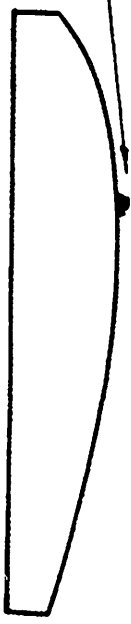


DRAIN PLUG


CUT TWO SIDES FROM 1/16" SHEET BALSAL.  
NOW MOISTEN THEM AND BEND TO SHAPE BY  
HOLDING AGAINST A LIGHTED ELECTRIC LIGHT.

BALSAL SEAT



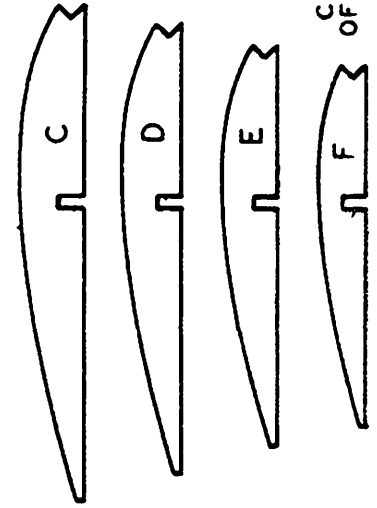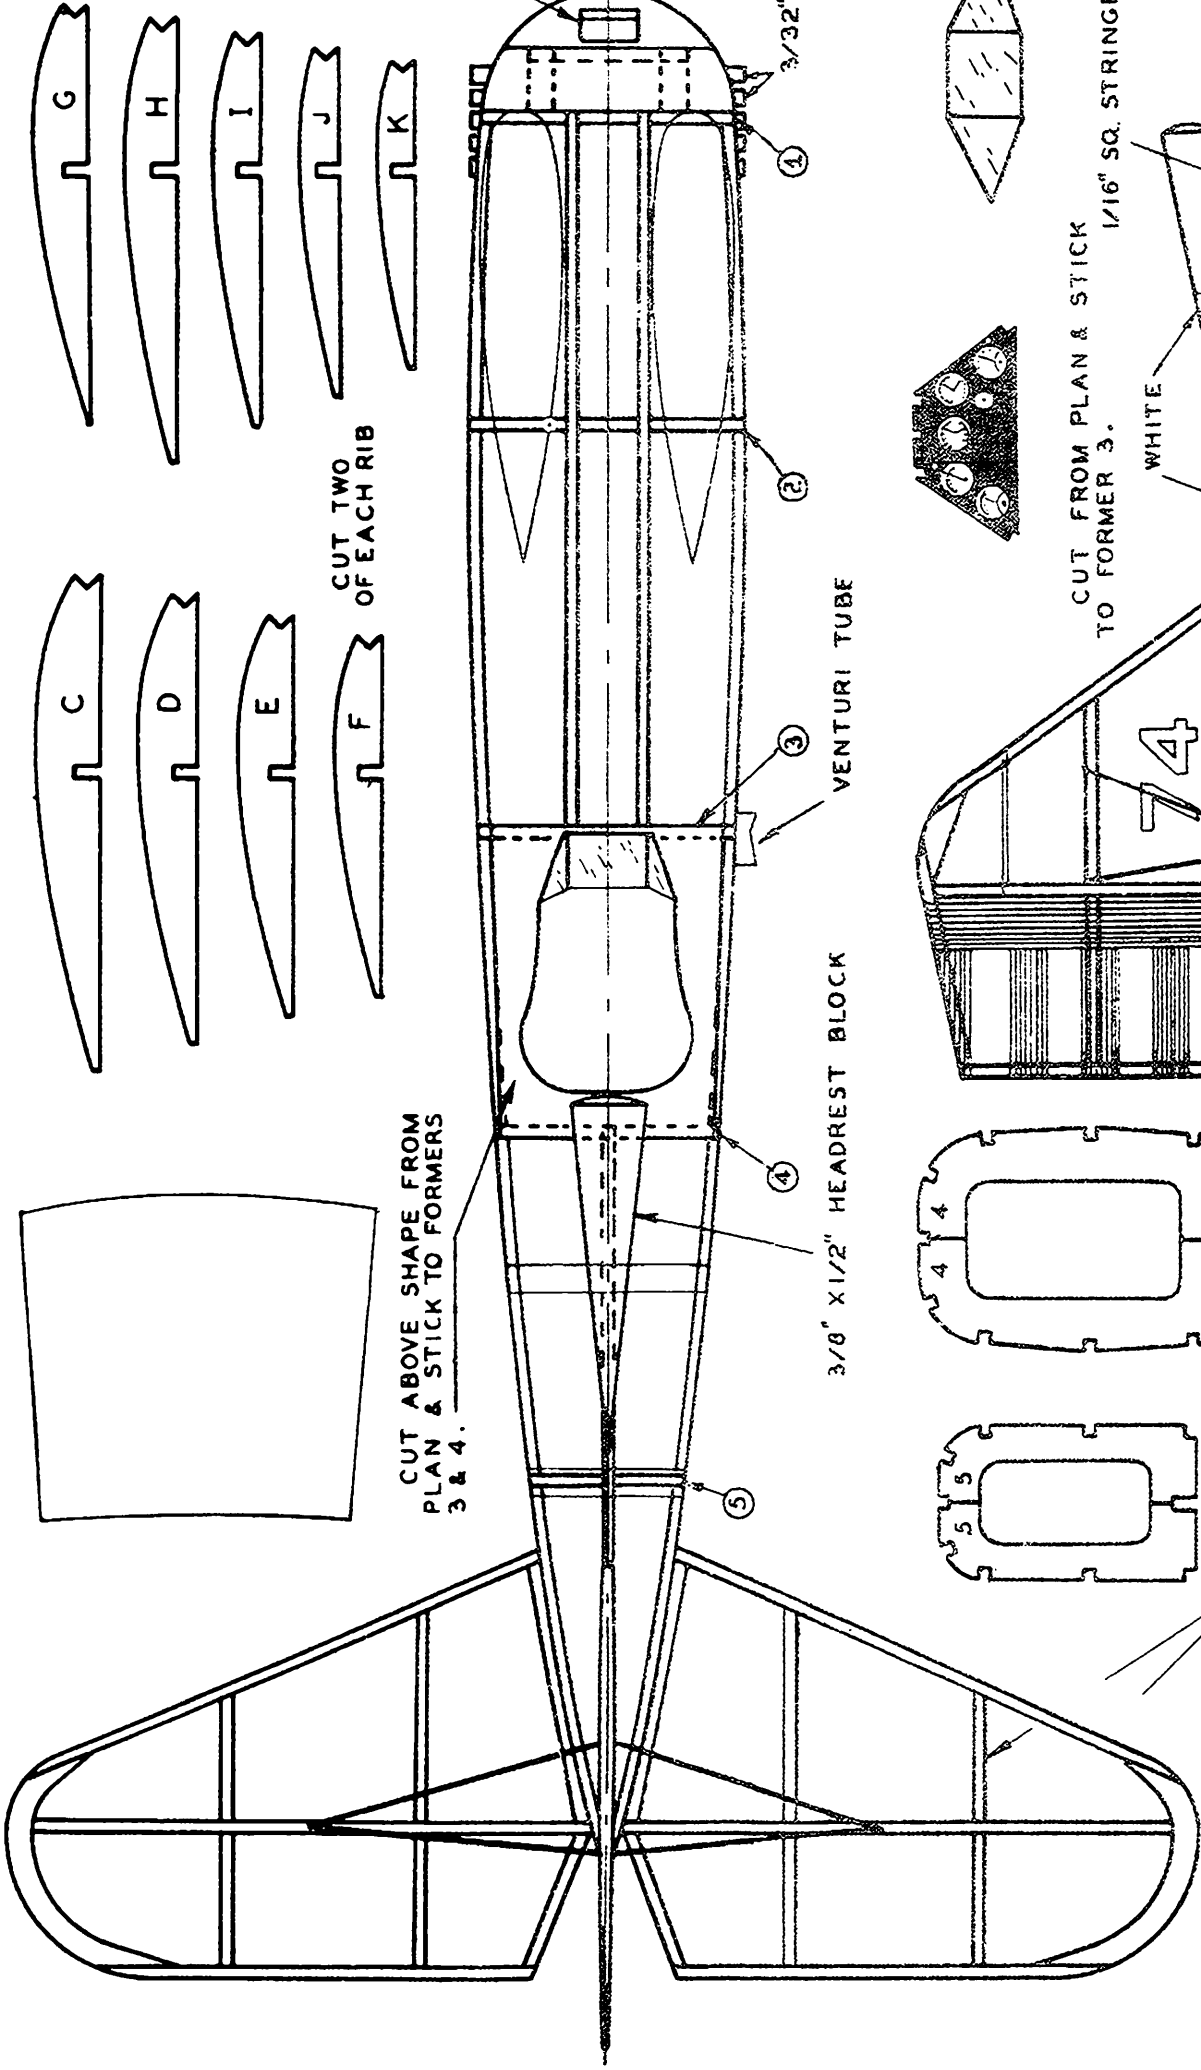



CUT TWO OF EACH RIB

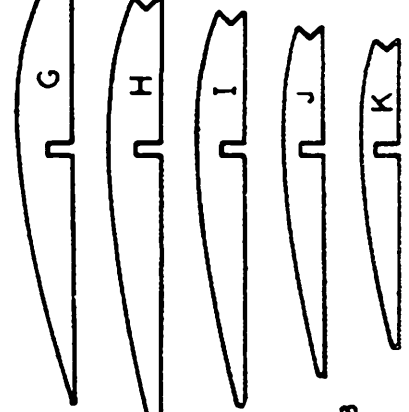


CUT ABOVE SHAPE FROM PLAN & STICK TO FORMERS 3 & 4.

3/8" X 1/2" HEADREST BLOCK

VENTURI TUBE

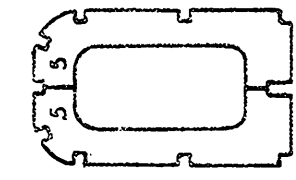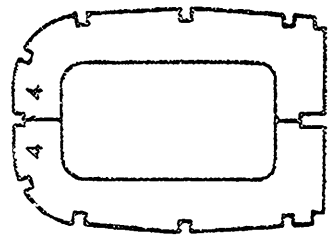

1/16" SQ. BALSA

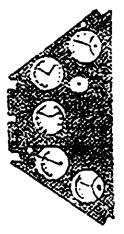

CUT FROM PLAN & STICK 1/16" SQ. STRING

